


TRANSFORMER HANDLING & STORAGE GUIDE



Do not lift with forklift truck.



Always store on a flat surface and fit with a breather if stored more than 2 weeks.

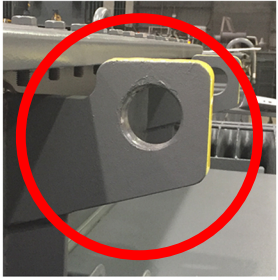

Only use lifting eyes on tank. All lifting eyes must be used.



Only use jacking points provided.




Fit breather prior to energisation.



Tighten HV cable connections to 19Nm using a calibrated torque wrench.



Unit may be top heavy. Caution should be taken when moving.

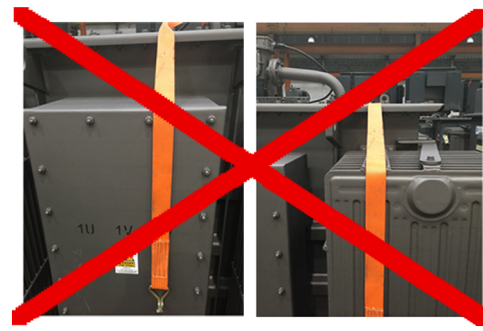

Do not secure over radiators or cable boxes.



All parts should be considered for lift weight, including accessories and switchgears.

**DO NOT OPEN
WARRANTY VOID
IF OPENED**

SHIPPING WEIGHT (KGS)
